






**SIMPLE WOODWORKING:  
PET BED FRAME**

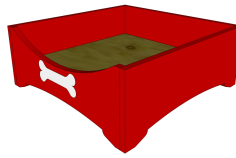


- PARTS**  
 Front - 3/4 x 9 1/4 x 22 1/2  
 Back - 3/4 x 9 1/4 x 22 1/2  
 Sides (2) - 3/4 x 9 1/4 x 24  
 Bottom - 3/4 x 22 3/8 x 22 3/8  
 Long Cleats (2) - 3/4 x 3/4 x 24  
 Short Cleats (2) - 3/4 x 3/4 x 22 1/2
- LUMBER**  
 1 - 1 x 8 x 8  
 4 - 3/4-inch square dowels  
 1 - 3/4 x 24 x 24 sheet of plywood

Assemble Front, Back, and Sides with glue and pocket hole screws, or glue and 4d nails. Attach the Cleats with glue and 1 1/4-inch brads. Do not permanently attach the bottom so it can be removed for cleaning if needed.

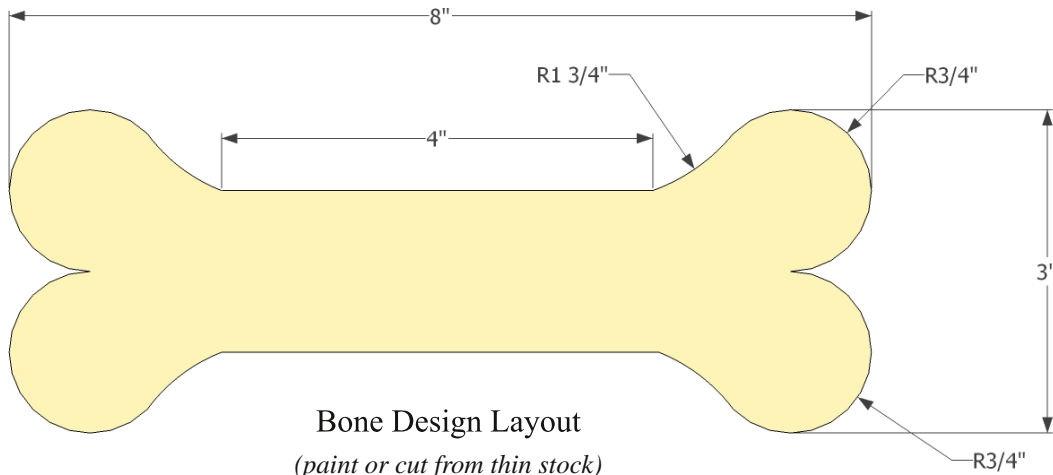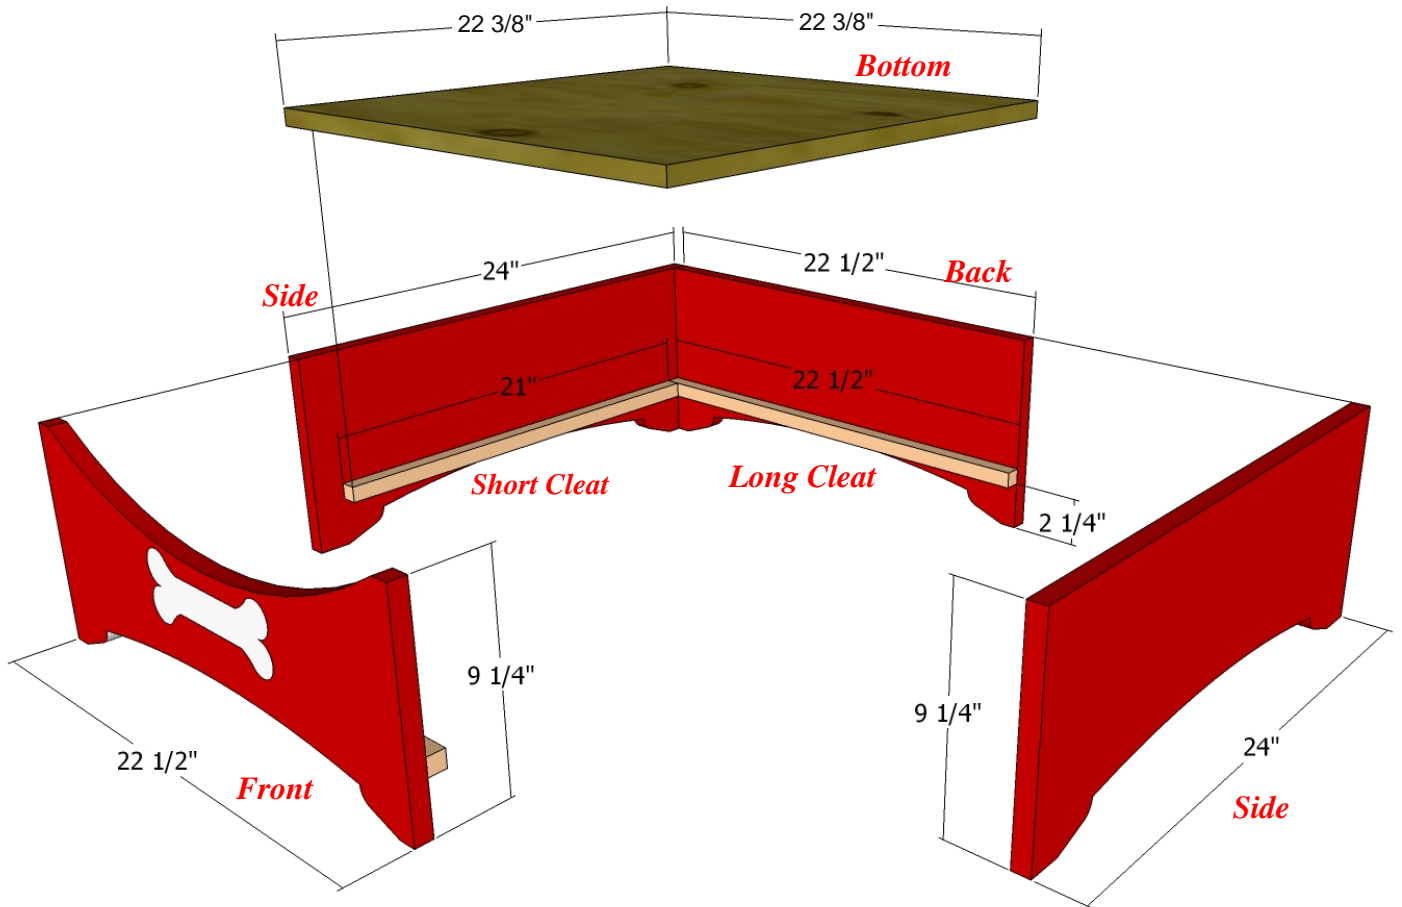



**SIMPLE WOODWORKING:  
PET BED FRAME**

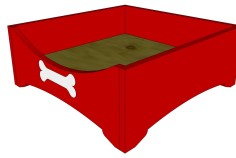

**PARTS**

- Front - 3/4 x 9 1/4 x 22 1/2
- Back - 3/4 x 9 1/4 x 22 1/2
- Sides (2) - 3/4 x 9 1/4 x 24
- Bottom - 3/4 x 22 3/8 x 22 3/8
- Long Cleats (2) - 3/4 x 3/4 x 24
- Short Cleats (2) - 3/4 x 3/4 x 22 1/2

**LUMBER**

- 1 - 1 x 8 x 8
- 4 - 3/4-inch square dowels
- 1 - 3/4 x 24 x 24 sheet of plywood

