


**Back Layout**

*Tip: The pattern at the bottom and top of the Back are the same. Use a piece of cardboard or 1/4-inch plywood to create a template, then mark the layout on the work piece.*

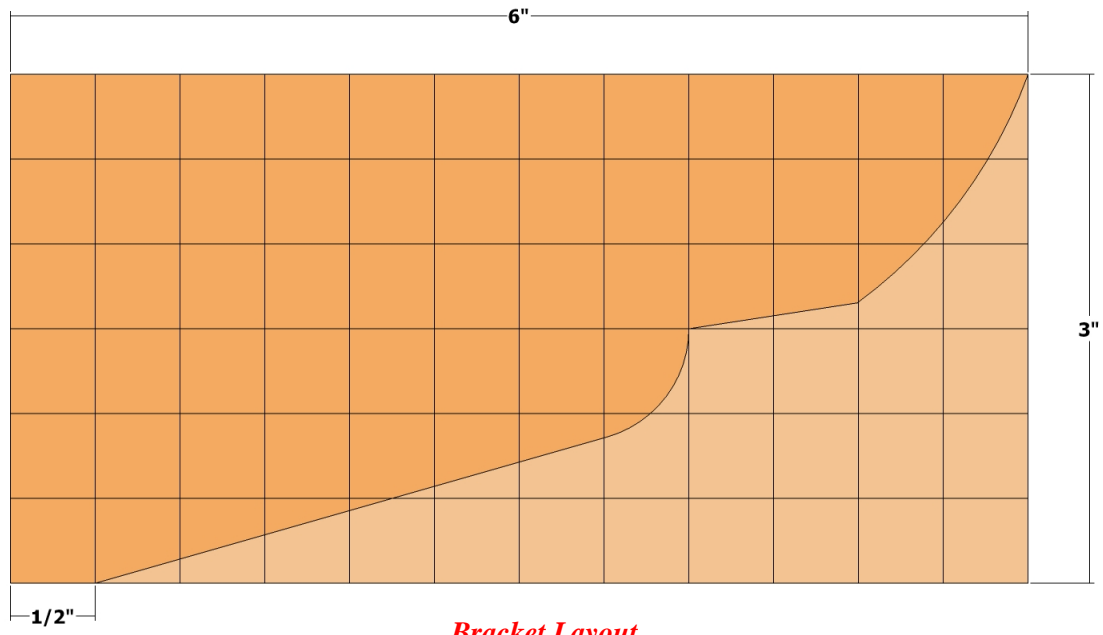

**Bracket Layout**

*Note: Be sure to cut the Brackets so that the grain of the wood runs parallel to the 6" sides.*



**SIMPLE WOODWORKING:  
WALL SHELF**




**PARTS**  
 Back - (1) 3/4 x 9 1/4 x 20  
 Brackets - (2) 3/4 x 3 x 6  
 Shelf - (1) 3/4 x 6 x 20

**LUMBER**  
 1 - 1 x 10 x 4

**ONE-BOARD PROJECT**




*Drill two pocket holes on the face of the 3"-wide end of each Bracket (shown in black at right). Position the Brackets as shown at right and attach with glue and 1 1/4" pocket hole screws.*

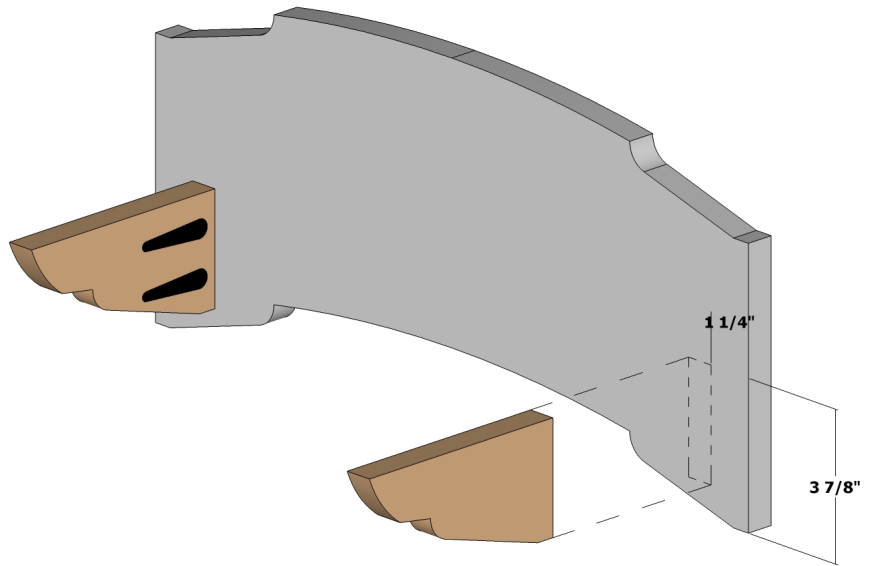

*Position the Shelf on top of the Brackets and flush with the edges of the Back. Attach to the brackets and back using glue and 4d nails.*

*To hang on the wall, attach heavy-duty keyhole hangers or heavy-duty flush mount cabinet/picture hangers to the Back.*

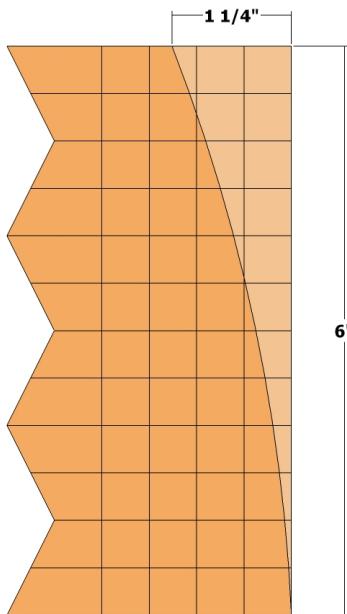

**Shelf End Layout**

